

Total active energy

Active power

KLEFR 6912, 6913 & 6914

KLEFR 6913 & 6914

KLEFR 6914

Button scroll: press the button for less than 3 seconds to scroll. After 30 seconds of no interaction the meter goes back to automatic scroll mode.

Current direction

Current direction

Checksum

Serial number

Total active energy

Total active energy

Total forward active energy

Total reverse active energy

T1 forward active energy

T1 reverse active energy

T2 forward active energy

T2 reverse active energy

Total reactive energy

Total reactive energy

Total forward reactive energy

Total reverse reactive energy

T1 forward reactive energy

T1 reverse reactive energy

T2 forward reactive energy

T2 reverse reactive energy

Active power

Voltage

Current

Frequency

Active power

Reactive power

Apparent power

Power factor

Resettable kWh

Resettable kWh

Hold the buttons for 5 seconds to reset.

Program mode 1 (read only)

LCD cycle time

Backlight

S0 output

Calculation code

Modbus/M-bus ID

Baud rate

Resettable kWh

Program mode 2 (write)

Parity

Power down counter

Program mode 3 (write: password protected)

LCD cycle time

Scroll with the button to select 1-30. Hold the button for 3 seconds to confirm.

Backlight

Scroll with the button to select on/off/button. Hold the button for 3 seconds to confirm.

Modbus/M-bus ID

Scroll with the button to select 3 digits. Confirm each digit by holding the button for 3 seconds.

Program mode 3 (write: password protected)

S0 output

Scroll with the button to select 10.000/2.000/1.000/100/10/1/0,1/0,01. Hold the button for 3 seconds to confirm.

Calculation code

Scroll with the button to select 01(F)/04(R)/05(F+R)/06(R-F)/09(F-R)/10(F-R). Hold the button for 3 seconds to confirm.

Baud rate

Scroll with the button to select 300/600/1200/2400/4800/9600. Hold the button for 3 seconds to confirm.

Parity

Scroll with the button to select even/none/odd. Hold the button for 3 seconds to confirm.

Power down counter

Hold the button for 3 seconds to reset.

Password

Select the new 4 digit password by choosing each digit (0-9). Confirm each digit by holding the button for 3 seconds.

Hold the button for 3 seconds to enter the next menu. Hold the button for 3 seconds to go back.

 
Display Shows:



Hold the right button for 3 seconds and enter 4 digit password to enter program mode.

Hold the right button for ≥5 seconds to add or remove from the automatic scroll.

Display Shows:



Hold the right button for ≥5 seconds to enter program mode.